FR480Z4 裝車說明書/Installation Manual for FR480Z4

1. 首先先將原廠頭燈拆下，如下圖；
   Firstly, remove the original set of headlight,.
   shown as following picture

2.取出保險桿上小燈燈炮座，如下圖所示；
Secondly, remove the set of light-bulb on the bumper,.
shown as following picture

3.利用附件包的接線夾將燈具地線(黑)與車體地線(黑)，燈具火線(藍)與車體火線(白/咖啡)對接即可，如下圖
Thirdly, using the wire-clip in the accessory pack to connect the ground-wire of the black one, from lamp set, with black one, from the automobile; the fire-wire of the blue one from the lamp set to the brown/white one from the automobile, shown as following picture.

4。 整燈功能/Functional Details

(1) 近燈(H7) Near light /Low beam (H7)

(2) 遠燈(H1) High beam (H1)

(3) 行車(LED 光圈) Running light/LED Halo

(4) 行車(LED) Running light/LED

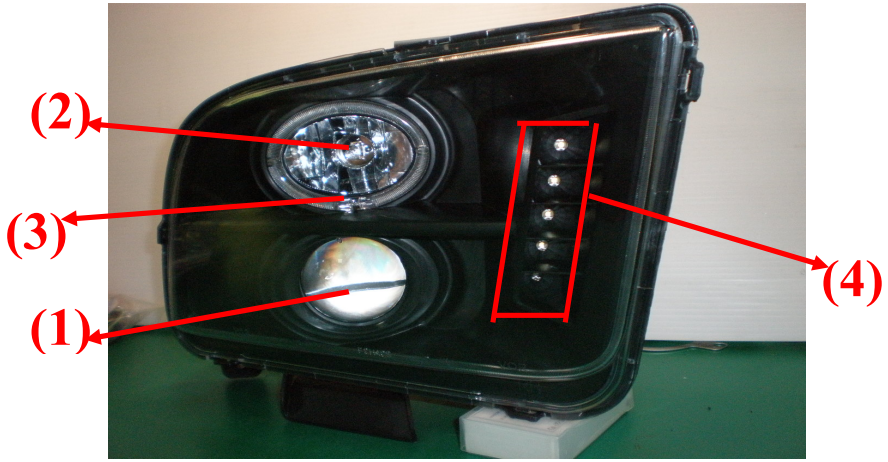

FR48Z4 裝車說明書

1. 首先先將原廠頭燈拆下 ，如下圖；

2.取出保險桿上小燈燈炮座，如下圖所示；

3.利用附件包的接線夾將燈具地線(黑)火與車體地線(黑)火線(白/咖啡)對接即可，如下圖線(藍)

4。 整燈功能

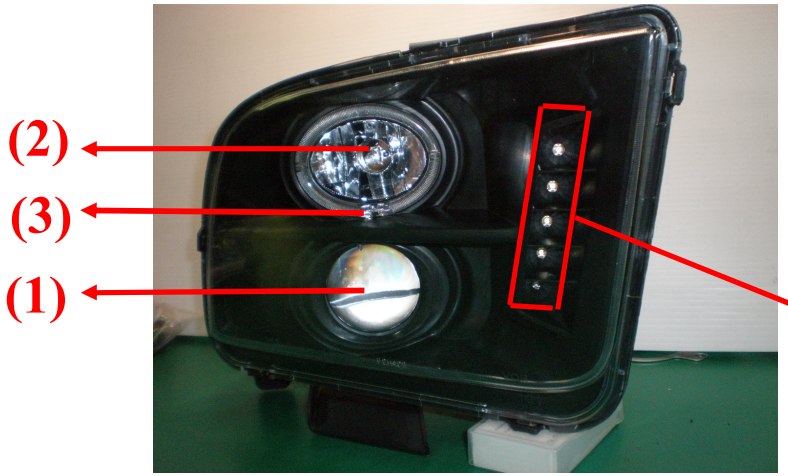

(1) 近燈(H7)

(2) 遠燈(H1)

(3) 行車(LED 光圈)

(4) 行車(LED)